

TR MODÜLER FRENLER

EN MODULAR BRAKES


DE BREMSMODULE

IT FRENI MODULARI

FR FREINS MODULAIRES

ES FRENOS MODULARES

PL	RB	PLB	RB
PL 1000	—	PLB 1000	—
PL 1600	—	PLB 1600	—
PL 2500	1	PLB 2500	—
PL 5000	1	PLB 5000	—
PL 7000	1-2	PLB 7000	—
PL 10000	1-2	PLB 10000	—
PL 16000	1-2	PLB 16000	—
PL 18000	2-3	PLB 18000	2
PL 25000	2-3	PLB 25000	2
PL 30000	2-3	PLB 30000	—
PL 35000	2-3	PLB 35000	2-3
PL 50000	2-3	PLB 50000	2
PL 65000	3-4	PLB 65000	3
PL 90000	3-4	PLB 90000	3
PL 130000	3-4	PLB 130000	3
PL 170000	3-4	PLB 170000	3-4
PL 220000	3-4	PLB 220000	3-4
PL 250000	4-5	PLB 250000	4
PL 300000	4-5	PLB 300000	4
PL 380000	4-5	PLB 380000	4-5
PL 460000	4-5	PLB 460000	5
PL 550000	4-5	PLB 550000	5
PL 620000	5	PLB 620000	5

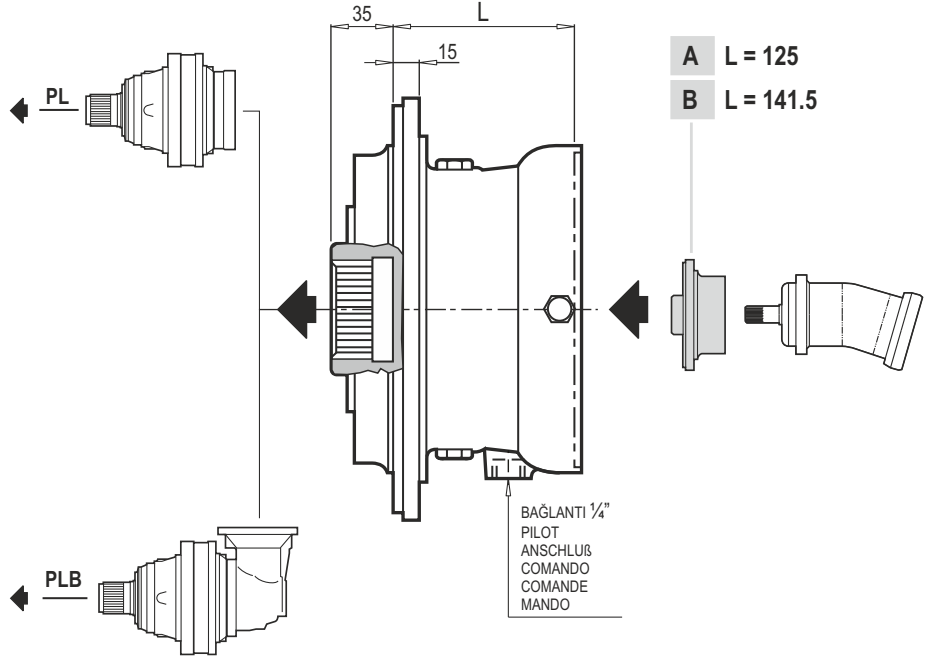

RB							
RB	Cfs _{min} [Nm]	P _a _{min} [bar]	Kod / Code Bestell Nr. / Codice Code / Código	P _{max} [bar]	OIL [lt]		Kg
					V1	B5	
RB 25	250	22	5074.300.500	300	0.6	0.3	12
RB 40	400	35	5074.301.500				
RB 63	650	50	5074.302.500				
RB 80	800	38	5074.303.500				
RB 100	1000	45	5074.304.500				
RB 125	1250	45	5074.305.500				
RB 160	1500	45	5074.306.500				
RB 180	1700	50	5074.307.500				

Not: 1-2-3-4-5 rakamları planet dişli ünitesinin kademe sayısını göstermektedir.

N.B: Numbers 1-2-3-4-5 refer to the number of stages of the planetary gear unit.

N.B. Die Ziffern 1-2-3-4-5 geben die Anzahl der Getriebestufen an.

N.B: i numeri 1-2-3-4-5 indicano il numero di stadi dei riduttori.

N.B: Les numéros 1-2-3-4-5 indiquent le nombre d'étages des réducteurs.

Nota: Los números 1-2-3-4-5 indican el número de etapas de los reductores.